

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER

To reduce the risk of electrocution

1. Always unplug this appliance immediately after using.
2. Do not use while bathing or in the shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquid.
5. Do not reach for an appliance that has fallen into water. **Unplug immediately.**

WARNING

To reduce the risk of burns, electrocution, fire, or injury to persons

1. An appliance should never be left unattended when plugged in.
2. Do not pull, twist or wrap line cord around appliance.
3. Close supervision is necessary when this appliance is used by, on, or near children

or individuals with certain disabilities.

4. Use this appliance only for its intended use as described in the manual. Do not use attachments not recommended by Conair.
5. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service centre for examination and repair.**
6. Keep the cord away from heated surfaces.
7. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
8. Never use while sleeping.
9. Never drop or insert any object into any opening or hose.
10. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
11. Do not use an extension cord with this appliance.
12. Do not touch metal "radiator" strips that hold rollers, as they will be hot.

SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS

How to operate your hairsetter

1. Place hairsetter on a firm, flat surface. With the lid closed, plug cord into outlet. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
2. Once plugged in the red light will go on and the rollers will heat up quickly. Rollers are ready to use when the ready dot on the roller turns transparent white, (please refer to HOW TO CURL YOUR HAIR for further instruction).
3. Allow rollers to heat with lid closed, as this will provide the fastest, most efficient heat-up. Once the rollers are hot, you can begin setting your hair. Allow rollers to heat longer for tighter curls. Never leave your hairsetter on and unattended. Always unplug the hairsetter when not in use. Allow the hairsetter to cool down after use, and store in a safe place.
4. Hair should be clean and dry or slightly damp – never wet – when setting.

USER MAINTENANCE


Your hairsetter is designed for household use and is virtually maintenance-free. This product represents the highest standards of workmanship and engineering research. If cleaning becomes necessary, disconnect the appliance from the power source. Allow the setter to cool. Clean the unit and the heating sinks with a cloth. (Occasionally you may want to clean your rollers. Use a damp cloth and mild detergent or soap.) If any abnormal condition occurs, unplug the hairsetter, allow it to cool, and return it to an authorized service representative for repair.

STORAGE

Allow hairsetter to cool. Handle cord carefully for longer life; avoid jerking or straining at plug connections. Place hairsetter out of reach of children in a safe, dry location.

HOW TO CURL YOUR HAIR

1. Place ends of hair on roller and wind toward the scalp. Roll up hair firmly, and secure wire clip, crossing over roller. Do not place wire clip in roller slit.
2. The firmness of the curl is regulated by the temperature and the length of time the roller is left in your hair.
3. For tight, firm curls, leave rollers in the hair for at least ten minutes before removing. For soft, wavy curls, the rollers should be removed from the hair after a shorter period of time.
4. Removing roller: hold roller in one hand while removing clip with the other. Gently drop roller (DO NOT PULL) and let curl bounce back after roller has been completely removed. Let cool for one minute for a firmly set curl, and then style your hair into a look that lasts for hours.

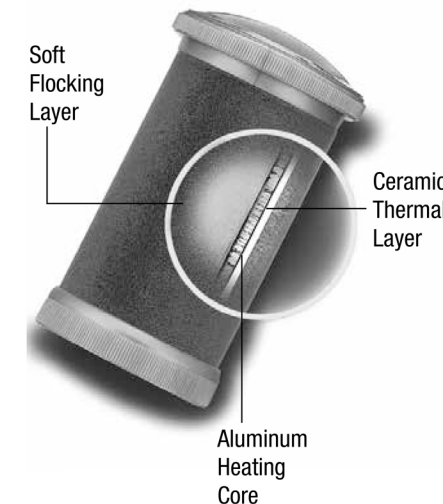

IMPORTANT: After using the hairsetter several times, you will find the best timing for the texture of your hair and for the result you desire.

- Jumbo rollers create smooth sleek lines of softer, sophisticated hair styles.
- Use super jumbo rollers for added volume.



Have a Question?

Please do not return this product to the retailer.

Call Us First!

Our customer service and product experts are ready to answer ALL your questions.

Please call our TOLL-FREE customer service number at: 1-855-926-6247 or visit us online at www.conaircanada.ca

SERVICE CENTRE :

CONAIR CONSUMER PRODUCTS ULC

100 Conair Parkway,
Woodbridge, Ont. L4H 0L2
Printed in China
1-855-926-6247

Visit our Web site: www.conaircanada.ca

Consumer Call Centre E-mail:

Consumer_Canada@Conair.com

©2014 CONAIR CONSUMER PRODUCTS ULC

CONAIR®

Instruction & Styling Guide
Model CHV14JRNC


Rollers come packed one size to a carton.
Rollers are sold by the carton only.

Model	Description	Price
RP102	3 Jumbo Rollers	\$4.75
RP158	4 Super Jumbo Rollers	\$6.50
RP63	12 Wire Clips	\$4.99

Please add \$3.75 postage and handling to all orders.

WARNING: IF YOU THINK THE POWER IS OFF WHEN THE SWITCH IS OFF, YOU'RE WRONG.

KEEP AWAY FROM WATER

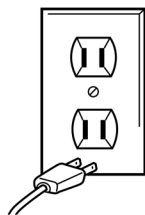

Everyone knows that electricity and water are a dangerous combination. But did you know that an electrical appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

LIMITED ONE YEAR WARRANTY

Conair will repair or replace, at our option, your appliance free of charge for 12 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre nearest you, together with your sales slip and \$7.50 for postage and handling. In the absence of a receipt, the warranty period shall be 12 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 12 MONTH DURATION OF THIS WARRANTY.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. This warranty gives you specific legal rights, and you may also have other rights which vary from province to province.