

IMPORTANT

Never leave your appliance on and unattended. However, should you fail to turn the waver off, it will shut itself off automatically within 60 minutes.

USER MAINTENANCE

Your waver is virtually maintenance free. No lubrication is needed. If cleaning becomes necessary, disconnect the waver from the power source, allow it to cool and wipe exterior with a cloth. If any abnormal condition occurs, unplug the waver, allow it to cool and return it for repair to an authorized service center only. No repairs should be attempted by the consumer.

CAUTION

NEVER allow the power supply cord to be pulled or twisted. Never wrap the cord around the waver. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your appliance should be disconnected, allowed to cool and stored in a safe, dry location, out of reach of children. Do not jerk or strain cord at plug connections. Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

WARNING: The instant-heat barrel will get very hot within a few seconds and should not come into contact with skin after the waver is turned on. When the high setting is chosen, the waver will have an extremely hot barrel. Always do a test curl before using the iron to ensure the proper setting for your hair type.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

DANGER— Any appliance is electrically live even when the switch is off. To reduce the risk of death or injury by electric shock:

1. Always unplug appliance immediately after use.
2. Do not use while bathing or in the shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into water or other liquids.
5. If an appliance falls into water, unplug it immediately. Do not reach into the water.

WARNING— To reduce the risk of burns, electrocution, fire, or injury to persons:

1. This appliance should never be left unattended when plugged in.
2. Do not pull, twist, or wrap line cord around appliance.

3. Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
4. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
5. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.
6. Keep the cord away from heated surfaces.
7. Never use while sleeping.
8. Never drop or insert any object into any opening or hose.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Unit is hot when in use. Do not let heated surfaces touch eyes or skin.
11. Do not place the heated unit directly on any surface while it is hot or plugged in. Use built-in counter rest.
12. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of hair, lint and other debris.
13. Do not use an extension cord to operate appliance.

14. Do not touch hot surfaces of the appliance. Use handles or knobs.
15. Do not attempt to touch the housing of your appliance near the barrel, as it is hot when in use.
16. Do not use with a voltage converter.
17. This appliance is not a toy. Keep away from children.

SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS

Use on Alternating Current (60Hz.) only. This unit is designed to be operated at 125V AC.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

NOTE: DO NOT USE THIS STYLING APPLIANCE ON HAIR EXTENSIONS.


STYLING WITH DOUBLE CERAMIC TECHNOLOGY

The barrel of your new waver has an Easy-Glide™ double ceramic-coated surface, the newest technology.

This double ceramic-coated surface helps to smooth down flyaways. As you clamp hair, it evenly distributes heat so that the style you create has a salon-perfect, silky smooth, shiny finish. Any residue from styling products that builds up on the ceramic-coated barrel can be easily cleaned.

**WARNING:
IF YOU THINK
THE POWER IS OFF
WHEN THE SWITCH
IS OFF,
YOU'RE WRONG.**

KEEP AWAY FROM WATER

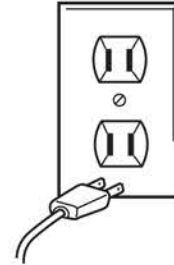

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

**ALWAYS UNPLUG
SMALL APPLIANCES**

USING INSTANT HEAT, THE 30 VARIABLE TEMPERATURE SETTINGS & UNIFORM HEAT RECOVERY SYSTEM

This waver features Conair's Instant Heat technology. Within this Instant Heat technology there are 30 variable temperature settings. There is a temperature range that is gentle and safe for every type of hair, from the finest to the curliest and most resistant, and helps you create the look you want. You can vary the iron's temperature according to your particular need!

Temperature Setting Guide

Temp. Control	Hair Type
Low 1-5	Fragile/Fine Hair
Medium 6-10	Thin Hair
Med/High 11-15	Medium/Normal Hair
High 16-20	Wavy/Curly Hair
Maximum 21-30	Coarse/Thick Hair
Turbo Heat®	Up to 20 °C/ 68 °F burst of heat for difficult styling spots

Conair's professional salon standards of engineering provide you with a Uniform Heat Recovery System that maintains the iron at constant temperatures.

LIMITED TWO-YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre listed below, together with your purchase receipt. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

CONAIR WILL REPAIR OR REPLACE (AT OUR OPTION) YOUR UNIT FREE OF CHARGE FOR 24 MONTHS FROM THE DATE OF PURCHASE IF THE APPLIANCE IS DEFECTIVE IN WORKMANSHIP OR MATERIALS.

TO OBTAIN SERVICE UNDER THIS WARRANTY, RETURN THE DEFECTIVE PRODUCT TO THE SERVICE CENTRE LISTED BELOW, TOGETHER WITH YOUR PURCHASE RECEIPT. IN THE ABSENCE OF A PURCHASE RECEIPT, THE WARRANTY PERIOD SHALL BE 24 MONTHS FROM THE DATE OF MANUFACTURE.

This warranty gives you specific legal rights, and you may also have other rights, which vary from province to province.

SERVICE CENTRE:

Conair Consumer Products ULC
100 Conair Parkway,
Woodbridge, Ontario, L4H 0L2

1-855-926-6247
©2020 Conair Consumer Products ULC

www.conaircanada.ca

Consumer Call Centre E-mail:
Consumer_Canada@Conair.com

Printed in China

20CN075915

IB-17046

DOUBLE CERAMIC TRIPLE BARREL WAVER



Have a Question?

Please do not return this product to the retailer.

Call Us First!

Our customer service and product experts are ready to answer ALL your questions.

Please call our TOLL-FREE customer service number at:
1-855-926-6247
or visit us online at
www.conaircanada.ca


Instructions & Styling Guide

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

CONAIR®

Instructions & Styling Guide Model CD704C

GET TO KNOW YOUR WAVER

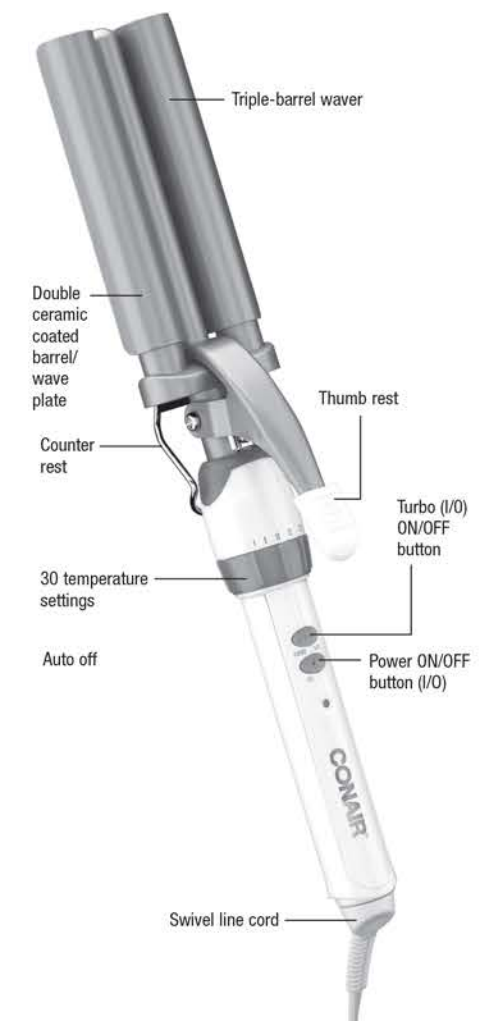

TO CREATE DEEP WAVES

Hair should be clean and completely dry before using the styling iron. For best results, use a light styling product before blow-drying hair.

1. Start with a section of hair that is 2 inches wide and place hair in between barrels.
2. Starting at the scalp, lightly clamp, moving toward the ends of your hair.
3. Hold the styler 5–10 seconds prior to releasing and sliding down.
4. This process requires some overlapping to create waves in the hair. Repeat the process until you have achieved the look you desire.

Some experience is necessary when learning to use this styler. After using the styler several times, you will learn the ideal way to style your hair easily.

There is a constant surge of power to ensure that heat is continuously delivered for optimal styling results, unlike other units, which lose heat during use. This provides consistent styling power so that every strand of your hair is set with the same level of heat and comes out the same way for a perfect finish.

GETTING STARTED

Plug the waver cord into any household outlet (125V AC). Press Power ON/OFF button. The unit will heat up very quickly. Red light will blink until it reaches desired temperature setting and then becomes solid.

To activate Turbo Heat®, press Turbo ON/OFF button and green light will go on, increasing waver temperatures up to 20 °C/ 68 °F. Press Turbo ON/OFF button again to turn off Turbo Heat®. The green light will turn red. To turn unit off, press Power ON/OFF button again red light goes out.

WARNING: The waver's barrels will get very hot within a few seconds and should not be placed in contact with the skin after the waver has been turned on.