 


use one of the attachments, press it down over the trimmer blades until it clicks into position.

2. Hold the trimmer in an upright position and begin trimming under your jawline, using short, even strokes.

3. After your beard is blended, turn off the trimmer and remove the attachment by gently pulling up on tab.



## TO TRIM YOUR MUSTACHE

1. For best results, start with a clean, slightly damp mustache.  
2. Comb through your mustache in the direction it grows.  
3. Place the wide 5-position comb over the facial hair blade and snap it into position. It is a good idea to start with the longest trim setting adjustment. (You can always go back and cut your mustache more closely with a shorter setting.)



## ALWAYS TRIM YOUR MUSTACHE FROM THE TOP DOWN



4. After your mustache has been trimmed to the desired length, remove the 5-position comb and, using the blades only, define the outline of the bottom of your mustache.  
5. Use the scribe blade for fine detailing and hair art.

## ON/OFF SWITCH

To operate, simply slide switch toward blade, to stop push slide away from blade.

## CARE OF YOUR TRIMMER REPLACEMENT (REMOVAL) OF BLADE SET

To remove blade set from your trimmer, make sure the trimmer is in the OFF position. Remove the blade set by placing thumb against the smaller cutter and pushing forward, releasing the cutter assembly from the trimmer housing. Replace with new cutting system and reverse the removal procedure, only this time place your thumb on the large cutter and snap into place. Make sure the taper control is set to the longest #1 position.

 


## BATTERY REMOVAL

CONTAINS NICKEL METAL HYDRIDE BATTERY. MUST BE COLLECTED, RECYCLED OR DISPOSED OF PROPERLY. DO NOT DISPOSE OF IN THE MUNICIPAL WASTE.



1. Using a small Phillips head screwdriver, remove the screws at the back of the trimmer.  
2. Remove the bottom housing and push the batteries out. Bring the batteries to the nearest collection centre for proper disposal. DO NOT throw the batteries into the normal municipal waste system.

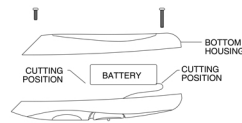


## OPERATING INSTRUCTIONS

### FOR YOUR PERSONAL GROOMING KIT

1. To insert battery, remove compartment cover at the back of the unit by pulling straight down (Fig. 1). Insert one AA alkaline battery, negative end up. (Alkaline batteries will ensure the best performance and longest life for your appliance.) If you are not going to use the unit for a long period

of time, or if the battery is dead, remove the battery from the unit. Remove used batteries promptly. This will increase the life of your trimmer.

 2. After inserting the battery, replace the battery compartment.
3. Now your unit is ready to be used.
- \*Do not use in the shower. To clean simply rinse trimmer blade under faucet.
4. To use your trimmer, push On/Off switch upwards to "On" position.
5. After you finish using your trimmer, push down on the On/Off switch to turn the trimmer off.
6. Always purchase the correct size and grade of battery most suitable for the intended use.
7. Replace all batteries of a set at the same time.
8. Clean the battery contacts and also those of the device prior to battery installation.
9. Ensure the batteries are installed correctly with regard to polarity (+ and -).
10. Remove batteries from equipment, which is not to be used for an extended period of time.
11. Remove used batteries promptly.

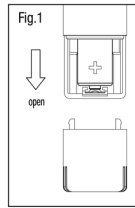

## SHAVING FOIL

Your trimmer includes a shaving foil. When attached, it will allow you to shave close and around your facial hair to provide an extra clean look. Just move the shaving head in an up and down gentle stroke to remove any stray hairs. Be sure not to press too hard, as that could cause some skin irritation.

After each use clean the shaving head as follows: 1. Make sure the appliance is off. 2. Remove the shaver head from the unit. 3. Remove the foil head from the shaving head (press the two buttons on either side of the shaving head and pull the foil head away). 4. Use the cleaning brush to gently remove any hairs from the cutter and shaving head.

## MULTI-USE GROOMING SYSTEM MODEL GMT187RC



- 1 Multi-use Handle
- 2 Trimming blade
- 3 Nose/Ear hair trimmer
- 4 Blade Cover
- 5 Foil Shaver
- 6 5-Position Adjustable Comb
- 7 Fine Detailing Blade
- 8 Mustache Comb
- 9 Cleaning Brush
- 10 Lubricating Oil
- 11-13 3 Jawline Combs
- 14 Storage Pouch

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

## READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

**DANGER** – Any appliance is electrically live, even when the switch is off.

To reduce the risk of death or injury by electric shock:

1. Always unplug appliance from electrical outlet immediately after using (except when charging unit).
2. Do not place or store appliance where it could fall or be pulled into a tub or sink.
3. Do not use appliance while bathing or in the shower.
4. Do not place appliance in, or drop into, water or other liquid.
5. If appliance has fallen into water, do not reach for it. Unplug immediately.
6. Unplug this appliance before cleaning.

## DO NOT REACH INTO THE WATER

## WARNING –

To reduce the risk of burns, electric shock, fire, or injury to persons:

1. Never leave a plugged-in appliance unattended.
2. This appliance should not be used by, on, or near children or individuals with certain disabilities.
3. Use appliance only for its intended use as described in this manual. Only use attachments recommended by the manufacturer. Do not use an extension cord to operate the appliance.
4. Never operate the appliance if it has a damaged cord or plug, is not working properly, has been dropped or damaged, or dropped into water. Return the appliance to a Conair service centre for examination and repair.
5. Keep the appliance cord away from heated surfaces.
6. Do not pull, twist or wrap the cord around the appliance.
7. Never drop or insert any object into any opening of the appliance.
8. Do not place the appliance on any surface while it is operating.
9. Do not use the appliance with a damaged or broken comb or with teeth missing from the blades, as injury may result. Before each use, make certain the blades are aligned properly and oiled.
10. Do not use the appliance outdoors or where aerosol (spray) products are being used or oxygen is being administered.
11. **THIS PRODUCT IS FOR HOUSEHOLD USE ONLY.**
12. CAN ICES-3(B)

## USER MANUAL FOR ADAPTOR

BEFORE USING THE CLASS 2 POWER SUPPLY, READ THESE INSTRUCTIONS CAREFULLY.

Use with adaptor CA51  
Rated input voltage: 100-240Vac, 50/60Hz, 0.2 A  
Rated output: 6VDC 70mA

## OPERATION

1. For dry location use only. Do not expose to rain.
2. When not in use, unplug unit completely.
3. Never operate this unit if the specification is out of the rating.
4. When using this unit, a warm temperature will be reached.

## CAUTION

1. Risk of electric shock, dry location use only or do not expose to liquid, vapor, or rain.
2. Do not shot the polarity (output cord).
3. Do not operate any appliance which has a damaged output cord or housing.
4. Always unplug the unit before cleaning or when not in use.
5. This power unit is intended to be correctly oriented in a vertical or floor mount position.
6. Be sure voltage is in correct voltage before plugging in.

## SAVE THESE INSTRUCTIONS

### TROUBLESHOOTING

If your rechargeable trimmer does not seem to be taking a charge, take the following troubleshooting steps before returning it for repair:

1. Be sure the electrical outlet is working by plug-

- ging in another appliance to test the outlet.
2. Make sure the electrical plug is not connected to a switch which turns power off when lights are turned off.
3. Be sure you have inserted the trimmer properly into the charging stand, that all connections are secure, and that the trimmer switch is in the "OFF" position.

## OPERATING INSTRUCTIONS:

1. Before using your trimmer for the first time, place the unit in the charging stand and charge it for 16 hours. Always place the trimmer in the base with the ON/OFF switch in the OFF position.
2. Always check to see if the charging light is on when you place the trimmer in the charging stand. The switch must face forward for the trimmer to slide properly into the base and fixed firmly.
3. Plug the adaptor into any wall outlet (at the voltage listed on the label affixed to the adaptor). Unplug adaptor when not in use.
4. The adaptor may become warm while charging. This is normal.

## Preserving the batteries:

In order to maintain the optimum capacity of the rechargeable batteries, the unit should be recharged for 16 hours every 3 months approximately.

## USER MAINTENANCE INSTRUCTIONS

### TAKING CARE OF YOUR TRIMMER

#### OILING THE BLADES

About once a month you should oil the trimmer blades with the oil provided in your kit. It is best to do this over a piece of newspaper. Turn the trimmer on and hold it so that the blades are

pointed downward. Spread one drop of oil across the blades, then turn the trimmer off and wipe away the excess oil with a soft cloth. Be careful not to use too much oil and don't oil your trimmer more than necessary, as this could damage the motor. (Never attempt to oil the motor bearing, as it is permanently lubricated.) After oiling the blades, return the trimmer and oil packet to the trimmer storage base. Keep oil away from children.

## BLADE CARE

Because the trimmer blades are precision-made for a very special use, they should always be handled with care. Each time you finish using the trimmer, take the cleaning brush provided and brush away any loose hair that has collected in the blades. Then store the trimmer in its recharging storage base to protect the blades until the next use.

Be especially careful when changing or adjusting blades. When you have your trimmer serviced, be sure that both blades are sharpened or replaced at the same time.

To promote the long life of the appliance, use your trimmer only for the purpose intended by the manufacturer – to trim your beard and mustache.

## THREE POSITION TAPER CONTROL

The Conair trimmer taper control switch is positioned at the back of the unit. You can hold the trimmer in your hand and adjust the switch as needed. The taper control eliminates the need in some situations for an attachment comb because it lets you gradually adjust the closeness of the cut. For closest cut and shortest hair, push switch all the way to level #3. This is the setting to use for the 2 day shave look. To increase the cutting length, slowly push control down to level

## LIMITED TWO YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre listed below, together with your purchase receipt and \$5.50 for postage and handling. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

**ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24 MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.**

**IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.**

This warranty gives you specific legal rights, and you may also have other rights, which vary from province to province.

Please register this product at: [www.conair.com/registration](http://www.conair.com/registration)

**SERVICE CENTRE:**  
CONAIR CONSUMER PRODUCTS ULC  
100 Conair Parkway  
Woodbridge Ontario, L4H 0L2

©2017 CONAIR CONSUMER PRODUCTS ULC  
For more information on any Conair product call:  
1-855-926-6247  
Visit our Web site: [www.conaircanada.ca](http://www.conaircanada.ca)  
Consumer Call Centre E-mail:  
[Consumer\\_Canada@Conair.com](mailto:Consumer_Canada@Conair.com)

17CN027409

IB-14933

## COMBO TRIM

BEARD AND MOUSTACHE TRIMMING SYSTEM



## Have a Question?

Please do not return this product to the retailer.

## Call Us First!

 
Our customer service and product experts are ready to answer ALL your questions.

Please call our TOLL-FREE customer service number at: 1-855-926-6247 or visit us online at [www.conaircanada.ca](http://www.conaircanada.ca)

Model GMT187RC  
Instruction Booklet



#2 or #1 for longer cut. Note that too much clipped hair on the clipper can slow down its operation. To remove it without removing the blades simply use the enclosed cleaning brush and gently sweep away the clipped hair from cutting surfaces.

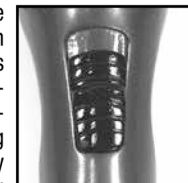

## GROWING A BEARD AND MUSTACHE

There are three key factors that will determine which beard or mustache style is best for you:

1. The shape and dimensions of your face.
2. The natural growth of your beard/ mustache.
3. The thickness of your beard/mustache. If you are unsure about the type of beard or mustache that would most suit your face, speak with a professional hair stylist and ask for an opinion on what style would be best. Once your beard or mustache has been styled, it is essential that you maintain its appearance. To do this, use your trimmer to trim your beard/mustache weekly.

For the best trimming results, your beard should be slightly damp (NOT WET) when using your trimmer. This will prevent the trimmer from removing more hair than desired.



## TYPES OF BEARDS/MUSTACHES

### GETTING STARTED:

#### OUTLINING YOUR BEARD

1. It is always best to begin with a clean, slightly damp beard.
2. After you have combed through your beard in the direction it grows naturally, you will want to outline

 
the desired shape, beginning under your jawline.

3. Begin defining your beard's shape under your chin and work upward on each side of your face toward your ears. Then define the upper outline of your beard across your cheeks, past your sideburns, and toward your hairline.



## NOW YOU'RE READY TO TRIM YOUR BEARD

1. The trimmer includes a five position comb for use with the hair trimming blade (2-10mm) which provide lengths of 3/32" (shortest) to 3/8" (longest).
2. To use the 5-position comb, slide the unit over the trimmer blades and snap it down into position. At first, until you become familiar with the adjustments, use the longest trim setting. (You can always go back and make your beard a little shorter.)
3. Begin trimming your beard using smooth, even strokes. Start with your sideburns and work downward toward your chin. Never attempt to trim against the natural growth of your beard because the hair will be cut too short.
4. If you decide you want a closer trim, you can now adjust the 5-position comb attachment to a shorter setting (such as 3/32" or 5/32") and go over your beard again until you achieve the desired length.

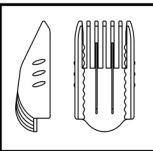

## BLENDING THE JAWLINE

1. The three jawline attachments will help you to achieve a neat, finished trim under your chin. To