

any heat-sensitive surface. After use, switch off and unplug the appliance. Continue to keep it out of the reach of children as it will remain hot for several minutes.

IMPORTANT

This appliance has an automatic shut-off feature for added safety. If the appliance is switched on for more than 60 minutes continuously, then it will automatically switch off.

If you wish to continue using the hot brush after this time, simply press the I/O button until the LCD displays 300°F and starts to blink, then use the +/- buttons to select the heat setting you require. This will turn on the hot brush and you can continue to style your hair.

USER MAINTENANCE

Your hot brush is virtually maintenance free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, allow to cool and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to an authorized service representative only. No repairs should be attempted by the consumer.

CAUTION


NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your appliance is easy to store. Allow appliance to cool, then simply store out of reach of children in a safe, dry location. Do not jerk or strain cord at plug connections. Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

**WARNING:
IF YOU THINK
THE POWER IS OFF
WHEN THE SWITCH
IS OFF,
YOU'RE WRONG.**

KEEP AWAY FROM WATER

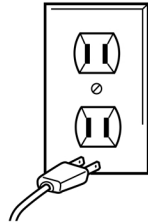

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

LIMITED TWO-YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace, at our option, your appliance free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center nearest you, together with your sales slip and \$7.50 for postage and handling. In the absence of a receipt, the warranty period shall be 24 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24 MONTH DURATION OF THIS WARRANTY.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights which vary from province to province.

SERVICE CENTRE:

Conair Consumer Products ULC

100 Conair Parkway,
Woodbridge, Ontario, L4H 0L2.

1-855-926-6247

©2017 Conair Consumer Products ULC

www.conaircanada.ca

Consumer Call Centre E-mail :

Consumer_Canada@Conair.com

17CN032270

IB-15446

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

DANGER — Any appliance is electrically live even when the switch is off. To reduce the risk of death by electric shock:

1. **Always unplug appliance immediately after using.**
2. Do not use while bathing or in the shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into water or other liquids.
5. If an appliance falls into water, unplug it immediately. **Do not reach into the water.**

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. **This appliance should never be left unattended when plugged in.**
2. This appliance should not be used by, on or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use, as described in this manual. Do not use attachments not recommended by the manufacturer.
4. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.**
5. **Keep the cord away from heated surfaces. Do not pull, twist, or wrap line cord around appliance.**
6. Never use while sleeping or drowsy.
7. Never drop or insert any object into any opening or hose.
8. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
9. Unit is hot when in use. Do not let heated surfaces touch eyes or skin.
10. **Do not place the heated unit directly on any surface while it is hot or plugged in.**
11. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of hair, lint and other debris.
12. Do not use an extension cord with this appliance.
13. Do not touch hot surfaces of the appliance. Use handles or knobs.
14. Do not attempt to touch the housing of your appliance near the barrel, as it is hot when in use.
15. Do not operate with a voltage converter.

3. Use this appliance only for its intended use, as described in this manual. Do not use attachments not recommended by the manufacturer.

4. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.**

5. **Keep the cord away from heated surfaces. Do not pull, twist, or wrap line cord around appliance.**

6. Never use while sleeping or drowsy.

7. Never drop or insert any object into any opening or hose.

8. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

9. Unit is hot when in use. Do not let heated surfaces touch eyes or skin.

10. **Do not place the heated unit directly on any surface while it is hot or plugged in.**

11. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of hair, lint and other debris.

12. Do not use an extension cord with this appliance.

13. Do not touch hot surfaces of the appliance. Use handles or knobs.


14. Do not attempt to touch the housing of your appliance near the barrel, as it is hot when in use.

15. Do not operate with a voltage converter.

16. This appliance is not a toy. Keep away from children.

17. **To avoid tangling, never roll the hair around the hot brush more than two times.**

SAFETY INSTRUCTIONS

1. Do not use the unit if it is damp or if your hands are wet.
2. **WARNING:** Polyethylene bags containing this product or its packaging can be dangerous. To avoid the risk of suffocation, keep these bags out of the reach of babies and children. A polyethylene bag is not a plaything.
3.  Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
4. If the appliance is used in a bathroom, unplug it after use. Leaving the appliance near a source of water may be dangerous, even if the appliance is off. For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your electrician for advice.
5. Do not immerse the appliance in water or any other liquid.
6. Stop using the appliance immediately if the cord is damaged. The power supply cord should not be replaced by the end user. The power supply cord should only be replaced by the manufacturer's authorized importer (or, in the United States and Canada, by an authorized Service Center).
7. Do not leave the appliance unattended while it is plugged in or in use.
8. Do not let the appliance's hot surfaces touch

eyes or skin.

9. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.

10. Allow the appliance to cool before storing.

11. After use, do not wind the cord around the appliance as this may damage it. Instead, roll the cord up loosely and let it rest by the side of the appliance.

SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS

This hot brush is intended for household use. Use on Alternating Current (60 hertz) only. This unit is designed to be operated at 125V AC.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

NOTE: Do not use this styling appliance on hair extensions.

SWITCH ACTIVATION CONTROL

IMPORTANT! This hot brush features delayed

activation control to give consistent results and ease of use while styling. Immediately after switching on the hot brush you are able to adjust the temperature. After 5 seconds of the hot brush being turned on, the switches will automatically lock. To adjust any settings, hold down the button of the required setting for 1–2 seconds; this will deactivate the lock mode and allow the settings to be changed. To turn off the hot brush, hold down the I/O button for 1–2 seconds until the unit switches off.

GETTING STARTED

Hair should be clean and completely dry before using the hot brush. Plug the brush into an electrical outlet. Turn on unit.

WARNING: The hot brush will get very hot within a few seconds and should not be placed in contact with the skin after the hot brush has been turned on.

The brush's unique 5 ultra-high heat temperature settings and Instant Heat technology provide styling versatility for all hair types. If you have fine hair, a low temperature will provide the best results. If you have thick, wavy or hard-to-curl hair, keep the heat setting on high. You can vary the brush's temperature according to your particular need!

Temperature Setting Guide

LCD TEMP. CONTROL	HAIR TYPE
Power—Low 300°F—320°F (150°C—160°C)	Delicate, thin, easy-to-curl hair
Medium 340°F (170°C)	Average to thick or treated hair
Med-High 355°F (180°C)	Thick or wavy hair
High/Max 375°F (190°C)	Hard-to-curl hair

BEAUTY TIPS:

To achieve the looks you love and for more great InfinitiPRO by Conair® products, visit: infiniti.conair.com

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

Due to continued product enhancements, product image may differ slightly from actual product purchased.



Have a Question?

Please do not return this product to the retailer.


Call Us First!

Our customer service and product experts are ready to answer ALL your questions.

Please call our TOLL-FREE customer service number at: 1-855-926-6247 or visit us online at www.conaircanada.ca

Instruction & Styling Guide Model BC514C

GET TO KNOW YOUR HOT BRUSH

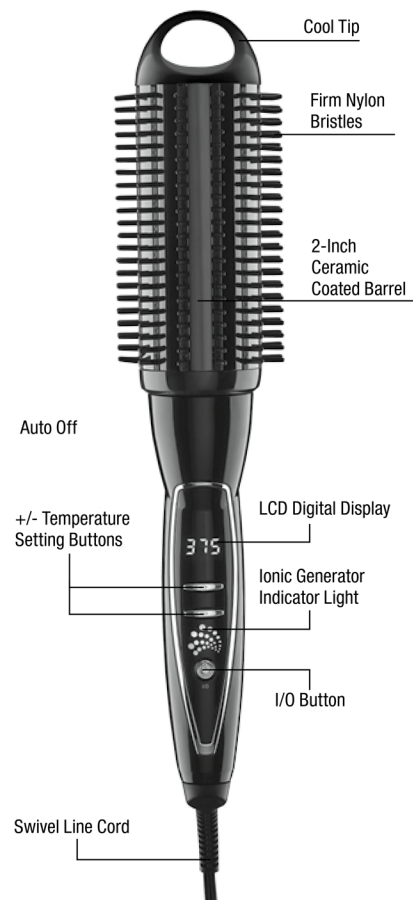

TO STYLE HAIR

1. Ensure hair is fully dry before using the hot brush.
2. Start by sectioning the hair.
3. To turn the appliance on, press the I/O button. The LCD will display 300°F and start to blink.
4. Use the +/- buttons to select the required temperature setting.
5. Place the hot brush underneath the hair section close to the roots and gently glide the hot brush down the hair to style.
6. To curl the ends of the hair under, wrap the hair ends around the barrel.
7. Repeat as necessary.

TO AVOID TANGLING, NEVER ROLL THE HAIR AROUND THE HOT BRUSH MORE THAN TWO TIMES. USE A SMALL SECTION OF HAIR AT A TIME.

NOTE: There will be a slight buzzing sound from the hot brush which is from the ionic generator releasing the ions. This is normal.

STYLING TIPS

- For a flicked-out style, place the hot brush on the top of the hair section and glide down the hair, wrapping the hair ends around the barrel in an upward direction.
- For added root volume, place the hot brush under the hair section close to the roots.
- Hold the hot brush in place for a few seconds.
- Remove the brush from the hair.
- Continue around the hair section and repeat as required.
- During use, do not place this appliance on