



This message about...

GROUND

FAULT

CIRCUIT

INTERRUPTERS

...can save a life!

IF YOU MUST USE YOUR HAIR DRYER IN THE BATHROOM, INSTALL A GFCI*NOW!

Your local electrician can help you decide which type is best for you—a portable unit that plugs into the electrical outlet or a permanent unit installed by your electrician. The National Electrical Code now requires GFCI's in the bathrooms, garages, and outdoor outlets of all NEW homes.

WHY DO YOU NEED A GFCI? Electricity and water don't mix. If your hair dryer falls into water while it's plugged in, the electric shock can kill you...even if the switch is "off." A regular fuse or circuit breaker won't protect you under these circumstances. A GFCI offers you far greater protection.



A GFCI can save your life! Compared to that, the price is small! Don't wait...install one now!

*GFCI is a sensitive device which reacts immediately to a small electric current leak by stopping the electricity flow.

ADDITIONAL INFORMATION

FOR DUAL-VOLTAGE DRYERS

For use in the North America, the voltage selector switch should be placed in the 125 position. For use in several countries overseas, the voltage selector may need to be placed in the 250 position. Confirm the voltage available at each overseas location before using the appliance.

For connection to a 240-volt supply, use an attachment plug adapter of the proper configuration for the power supply.

FOR 110-125 VOLT OPERATION

Flick the dual voltage switch to the 125 position. In this position, the dryer has two settings. It provides two speeds and two heats—low speed and low heat on "I" and high speed and high heat on "II".

FOR 220-250 VOLT OPERATION

First put the "II - I" switch into "I". Flick the Dual voltage switch to the 250 position. At 220-250V while set at "I", the dryer operates only at high speed with high heat. **Do not attempt to operate the "II - I" switch or change to 125 when operating on 220-250V. The switches must be set and remain in the "I" and 250 positions.** A plug adapter may be necessary in certain countries.

USER MAINTENANCE

Your dryer is virtually maintenance free. No lubrication is needed. For proper operating performance, the dryer must be kept clean. When cleaning is needed, unplug the cord, and clean dust and lint from air intake openings with a small brush or the brush attachment of a vacuum cleaner. The outer surface of the dryer should be wiped clean with a damp cloth only.

Blocked or clogged air intake vents will cause the dryer to overheat. If overheating occurs, an automatic safety device will shut the dryer or the heat off to prevent damage or personal injury. If the unit or the heat cycles off, unplug the cord and allow the dryer to cool for 10 to 15 minutes before restarting. Make sure the air vents are clean.

CAUTION

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the dryer. Damage will occur at the high flex point of entry into the dryer, causing it to rupture and short. Inspect the cord frequently for damage. **Stop use immediately if damage is visible or unit stops or operates intermittently.**

If the cord or dryer is damaged or does not operate properly, return it for repair to an authorized Conair service representative only. No repairs should be attempted by the consumer.

STORAGE - Important

When not in use, your dryer should be disconnected and stored in a safe, dry location, out of reach of children. **Do not wrap line cord around dryer.** Allow the cord to hang or lie loose and straight at the point of entry into the dryer.

LIMITED ONE YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 12 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre listed below, together with your purchase receipt. In the absence of a purchase receipt, the warranty period shall be 12 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 12 MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights, which vary from province to province.

SERVICE CENTRE
CONAIR CONSUMER PRODUCTS ULC
100 Conair Parkway
Woodbridge, ON L4H 0L2
1-855-926-6247

www.conaircanada.ca
Consumer Call Centre E-mail :
Consumer_Canada@Conair.com

©2021 CONAIR CONSUMER PRODUCTS ULC
21CN078340

IB-17255

INFINITI**PRO**
BY CONAIR

1875 WATT TEXTURED 3-IN-1 CERAMIC DRYER/ STYLER



Have a Question?

Please do not return this product to the retailer.

Call Us First!

Our customer service and product experts are ready to answer ALL your questions.

Please call our TOLL-FREE customer service number at: 1-855-926-6247 or visit us online at www.conaircanada.ca

Instruction & Styling Guide
Model SD9C

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

DANGER — Any hair dryer is electrically live even when the switch is off: To reduce the risk of death or injury by electric shock:

1. Always “unplug it” immediately after using.
2. Do not use while bathing or in a shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into, water or other liquid.
5. If an appliance falls into water, “unplug it” immediately. Do not reach into the water.

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. This appliance should never be left unattended when plugged in.
2. Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.

3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped, damaged, or dropped into water. Return the appliance to a Conair service centre for examination and repair.
5. Keep the cord away from heated surfaces. Do not pull, twist, or wrap line cord around dryer, even during storage.
6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
7. Never use while sleeping.
8. Never drop or insert any object into any opening or hose.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Do not use an extension cord to operate dryer.
11. Do not direct hot air toward eyes or other heat-sensitive areas.
12. Attachments may be hot during use. Allow them to cool before handling.
13. Do not place appliance on any surface while it is operating.
14. While using the appliance, keep your hair out of it. Keep your hair away from the air inlets.
15. Do not use with voltage converter.
16. This appliance is not a toy. Keep away from children.

SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS

This appliance is intended for household use only. Use on Alternating Current (60 hertz) only. Standard dryers are designed to operate at 110 volts AC.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

IMPORTANT 1875 WATT OPERATING GUIDE

Use of dryer on the same circuit or fuse with other electrical products or appliances may trip a 15 amp circuit breaker or blow a 15 amp fuse.

NEVER replace the fuse with one rated higher than the capacity of the circuit. Doing so could result in an electrical fire.

SUPER STYLING GUIDE

Your best looks begin with a good haircut that's well maintained. Always treat hair right with superior quality shampoos, conditioners, and finishing products.

BRUSH/COMB ATTACHMENT STYLING BASICS & INSTRUCTIONS

Shampoo and condition hair with products of your choice. Gently towel blot hair to remove excess moisture. Part hair into sections. Follow the instructions to achieve your desired style. Note: to prevent overdrying, reduce setting to “1” when hair is almost dry.

DUAL-ROW STRAIGHTENING COMB

Attach to dryer and select HIGH speed. Slowly drag attachment down hair strands to smooth away frizz and straighten hair. The slower you pass dryer through the strands, the straighter the result.

FOR EXTRA VOLUME AND DETANGLING

Select the detangling comb attachment and set dryer on LOW speed. Hold dryer securely in one hand and use a natural combing action to fluff hair, beginning at the roots. Move from section to section until hair is dry.

FOR CREATING FULLNESS

Select the brush attachment and set dryer on “1” speed. Starting at the nape of the neck, first lift hair up and away from the scalp with the brush, then rotate the brush downward to the ends. Move from section to section until hair is dry.

GETTING TO KNOW YOUR STYLER/DRYER

When used without attachments, it's a powerful compact dryer. When used with attachments, it's a versatile hair drying and styling system.

