

USER MAINTENANCE

Your curling iron is virtually maintenance free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, allow to cool and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to an authorized service representative only. No repairs should be attempted by the consumer.

CAUTION

NEVER allow the power supply cord to be pulled or twisted. Never wrap the cord around the appliance. Damage will occur at the high-flex point of entry into the appliance, causing it to rupture and short circuit.

Inspect the cord frequently for damage. STOP USE IMMEDIATELY if damage is visible or if unit stops or operates intermittently.

STORAGE — Important

When not in use, your appliance should be disconnected and stored in a safe, dry location, out of reach of children. Do not wrap line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

IMPORTANT SAFETY INSTRUCTIONS

When using electric appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER — Any appliance is electrically live even when the switch is off. To reduce the risk of death or injury by electric shock:

1. **Always unplug it immediately after using.**
2. Do not use while bathing or in the shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into water or other liquids.
5. If an appliance falls into water, unplug it immediately. **Do not reach into the water.**

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. **This appliance should never be left unattended when plugged in.**
2. **Do not pull, twist, or wrap line cord around appliance.**

3. This appliance should not be used by, on or near children or individuals with certain disabilities.
4. Use this appliance only for its intended use, as described in this manual. Do not use attachments not recommended by the manufacturer.

5. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.**

6. Keep the cord away from heated surfaces.
7. Never use while sleeping.
8. Never drop or insert any object into any opening or hose.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Unit is hot when in use. Do not let heated surface touch eyes or bare skin.
11. **Do not place the heated unit directly on any surface while it is hot or plugged in.**

12. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and other debris.

13. Do not use an extension cord with this appliance.

14. Do not touch hot surfaces of the appliance. Use handles or knobs.

15. Do not attempt to touch the housing of your appliance near the barrel, as it is hot when in use.

16. Do not use with a voltage converter.

17. This appliance is not a toy. Keep away from children.

SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS


Use on Alternating Current (60 hertz) only. This unit is designed to be operated at 125VAC.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

NOTE: Do not use this styling appliance on hair extensions.

**WARNING:
IF YOU THINK
THE POWER IS OFF
WHEN THE SWITCH
IS OFF,
YOU'RE WRONG.**

KEEP AWAY FROM WATER

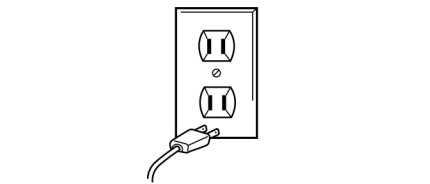

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

GETTING STARTED

Plug the iron into an electrical outlet. Turn on unit. Allow unit to heat up for 15 seconds.

IMPORTANT!

The temperature setting will automatically lock within 5 seconds of turning your appliance on. You may adjust the temperature immediately after turning the appliance on OR, if the temperature setting is locked, hold down the + or - button for 1–2 seconds to adjust it.

Press and hold the ON/OFF button for 1–2 seconds to turn off unit (light will go off). Never leave your curling iron on and unattended. However, should you fail to turn the unit off, it will shut itself off automatically within 60 minutes.

WARNING: The curling iron's titanium ceramic-coated barrel will get very hot within a few seconds and should not be placed in contact with the skin after the curling iron has been turned on.

ADVANCED IONIC TECHNOLOGY

Many aspects of modern living, including air conditioning, contact with man-made fibers and air pollution, contribute to a buildup of static electricity in the hair. Even brushing and towel-drying the hair can increase these levels, causing the surface of the cuticle to become rough.

Consequently, hair may have a dull appearance. Also, high levels of static charge cause hair to become flyaway and difficult to style.

The powerful ion generator produces a stream of negative ions that act to neutralize the static

LIMITED THREE-YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace, at our option, your appliance free of charge for 36 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre listed below, together with your purchase receipt. In the absence of a purchase receipt, the warranty period shall be 36 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 36-MONTH DURATION OF THIS WARRANTY. IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights which vary from province to province.

charge, smoothing the scales on the cuticle for shiny, smooth and manageable hair, so you can achieve your desired style easily.

NOTE: The unit may produce a clicking sound at times, which is normal for a high-output ion generator.

STYLING WITH THE NEW TITANIUM CERAMIC-COATED EASY-GLIDE BARREL

The barrel of this premium curling iron are coated with a combination of the best materials for styling. A fusion of titanium and ceramic evenly distributes heat to gently style and protect hair from damaging hot spots. As you curl each strand, you'll achieve a salon-perfect finish.

The barrel is exceptionally easy to clean, and you'll discover this combination of technologies leaves your hair silky smooth.

USING INSTANT HEAT, THE 11 ULTRA-HIGH HEAT TEMPERATURE SETTINGS & UNIFORM HEAT RECOVERY SYSTEM

This styling iron features a ceramic heater that maintains constant temperature during use for precision styling.

The instant heat technology has 11 ultra-high heat temperature settings. There is a temperature range that's gentle and safe for every type of hair, from the finest to the most resistant, and helps you create the look you want. And that's not all. Conair's professional salon standards of engineering provide you with a uniform and improved heat recovery system

that maintains the iron at constant temperatures. There is a constant surge of power to ensure that heat is continuously and quickly delivered for optimal styling results, unlike other units, which lose heat during use. This provides consistent styling power so that every strand of your hair is set with the same level of heat and comes out the same way for a perfect finish.

The iron's unique 11 high-heat temperature settings and instant heat technology provide styling versatility for all hair types. If you have fine hair, a low temperature will provide the best results. If you have thick, wavy or hard-to-curl hair, keep the heat setting on high. You can vary the iron's temperature according to your particular need!

Temperature Setting Guide	
LCD TEMP. CONTROL	HAIR TYPE
Low 105-155 °C (220-310 °F)	Fragile/Fine Hair
Medium 155-165 °C (310-330 °F)	Medium/Normal Hair
Med-High 165-185 °C (330-365 °F)	Wavy/Curly Hair
High/Max 185-205 °C (365-400 °F)	Coarse/Thick Hair

TO CURL HAIR

Hair should be clean and completely dry before using the curling iron. Section hair evenly, and comb each section before winding. For best results, use a light styling product before blow-drying hair.



SERVICE CENTRE
©2020 CONAIR CONSUMER PRODUCTS ULC
100 Conair Parkway
Woodbridge Ontario, L4H 0L2
For more information on any Conair product call: 1-855-926-6247
Visit our Web site:
www.conaircanada.ca
Consumer Call Centre E-mail:
Consumer_Canada@Conair.com

20CN073234

IB-16815

Models CD600C/CD601C

1. Start curling with a hair section that is 1 inch wide and no more than ½ inch thick. Open the spoon and place curling iron midway up the hair section, then spread hair evenly between spoon and barrel. Gently slide the curling iron down to hair ends. To avoid crimped ends, make sure they are securely wound under the spoon in the direction of the desired curl. Remember, always place the spoon above the hair strand when making a curl you want rolled under; place the spoon under the hair strand when creating a flip style.
2. Wind the hair up as far as you want it curled, being careful not to let the iron touch the scalp. Hold 8–12 seconds, depending on the length and texture of your hair. For tighter, bouncier curls, roll less hair. For looser, free-flowing curls, roll more hair. Repeat process on additional sections of hair until you achieve the hairstyle you desire.
3. To remove the curling iron, unwind the hair and press the handle and allow curl to slide out. To set curl, do not comb or brush curls until cool.
4. Repeat process on additional sections of hair until you achieve the hair style you desire. It may be necessary to repeat process on certain areas, depending on the texture of your hair.

Some experience is necessary when using this curling iron. After using the iron several times, you will learn the ideal way to curl and style your hair.

GET TO KNOW YOUR CURLING IRON

