


## Temperature Setting Guide

TEMP. CONTROL	HAIR TYPE
I (Low)	Delicate to average hair
II (High)	Average-to-thick or treated hair

## GET TO KNOW YOUR 2 IN 1 STYLER

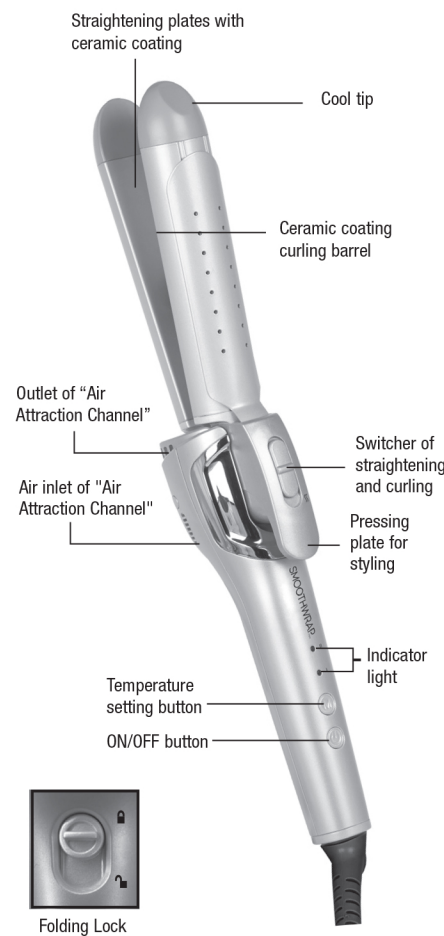

## USER MAINTENANCE

Your 2 in 1 Styler is virtually maintenance-free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, allow to cool and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to an Authorized Service Centre only. No repairs should be attempted by the consumer.

### CAUTION


NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

### STORAGE

When not in use, your appliance is easy to store. Allow appliance to cool, then simply store out of reach of children in a safe, dry location. **Do not jerk or strain cord at plug connections.** Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

**WARNING:**  
**IF YOU THINK THE POWER IS OFF WHEN THE SWITCH IS OFF, YOU'RE WRONG.**

KEEP AWAY FROM WATER

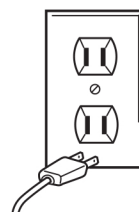

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

**ALWAYS UNPLUG SMALL APPLIANCES**

## LIMITED TWO YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 24-months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre listed below, together with your purchase receipt.

In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

**ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.**

**IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.**

This warranty gives you specific legal rights, and you may also have other rights, which vary from province to province.

### SERVICE CENTRE :

**CONAIR CONSUMER PRODUCTS ULC**

100 Conair Parkway,  
Woodbridge, ON L4H 0L2

Printed in China  
1-855-926-6247

Visit our Web site: [www.conaircanada.ca](http://www.conaircanada.ca)

Consumer Call Centre E-mail:

[Consumer\\_Canada@Conair.com](mailto:Consumer_Canada@Conair.com)

©2020 CONAIR CONSUMER PRODUCTS ULC

**20CN073528**

**IB-16833**

Powered by  
**INFINITI PRO**  
CONAIR

**SMOOTHWRAP™**  
Smooth. Balanced. Healthy Looking.  
A New Styling Experience.

{ 2 IN 1 STYLER }



## Have a Question?

*Please do not return this product to the retailer.*

**Call Us First!**

**Our customer service and product experts are ready to answer ALL your questions.**

**Please call our TOLL-FREE customer service number at: 1-855-926-6247 or visit us online at [www.conaircanada.ca](http://www.conaircanada.ca)**

Instruction & Styling Guide  
Model CS3290C

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

### READ ALL INSTRUCTIONS BEFORE USING

### KEEP AWAY FROM WATER

**DANGER** — Any appliance is electrically live even when the switch is off. To reduce the risk of death by electric shock:

1. Always unplug appliance immediately after using.
2. Do not use while bathing or in the shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into, water or other liquids.
5. If an appliance falls into water, unplug it immediately. Do not reach into the water.

**WARNING** — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. This appliance should never be left unattended when plugged in.
2. Do not pull, twist, or wrap line cord around appliance.
3. This appliance should not be used by, on or near children or individuals with certain disabilities.

4. Use this appliance only for its intended use, as described in this manual. Do not use attachments not recommended by the manufacturer.
5. Never operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service centre for examination and repair.
6. Keep the cord away from heated surfaces.
7. Never use while sleeping.
8. Never drop or insert any object into any opening.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Unit is hot when in use. Do not let heated surfaces touch eyes or bare skin.
11. Do not place the heated unit directly on any surface while it is hot or plugged in.
12. Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.
13. Do not use an extension cord with this appliance.
14. Do not touch hot surfaces of the appliance. Use handles or knobs.
15. Do not attempt to touch the housing of your appliance near straightening plates, as it is hot when in use.
16. Do not use with voltage converter.
17. This appliance is not a toy. Keep away from children.

18. Before plugging in, read the information about dual voltage in the Operating Instructions section of this manual.

## SAVE THESE INSTRUCTIONS OPERATING INSTRUCTION

Use on Alternating Current (50/60 Hz) only. This unit is designed to be operated at 120/240V AC.

This appliance has a polarized plug (one blade is wider than the other.) As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

**NOTE: do not use this styling appliance on hair extensions.**

### FEATURES

1. Smoothwrap™ technology of this product can release positive and negative ion at the same time, make hair more moist.
2. Unique "Air Attraction Channel" will bring more moisture to hair, makes hair more moist.
3. 2-in-1 function can achieves both of straightening and curling style.
4. 32mm diameter on barrel, make curling more natural.

5. Ceramic coating on diameter, protects hair from damage by higher temperature.
6. 2 settings on temperature, Max 200°C.
7. Folding handle, easy storage. Note: please make sure the styler is turned off and cool down before folding the handle.

### DUAL VOLTAGE

This styler has dual voltage. It will automatically adjust to the proper voltage. Use an adapter plug with correct configuration prior to use in outlet.

### OPERATION

1. Please clean hair before using this product and dry hair with hair dryer, then use brush or finger to make to comb hair to smooth out twists or knots. Then product can be used.
2. Please make sure nothing around the styler before using or will cause damage.
3. Please make sure the cleaning on barrel before using and please don't use any hair styling products like hair spray, can use them after using.
4. The coating on heating plate is ceramic and it will be abraded after using for a time. If hair dyed, the hair dye may left on the heating plates, this is normal for using.
5. There will be some sound when using, it is normal because of the positive and negative ion released.
6. Please make sure power will be cut off after using and touch or storage it until product cool down, or will cause damage.
7. There is proof-heating design on top part of this product but because the high tempera-

- ture when working, so cannot achieve totally cool on this part so please only hold on flat part and don't touch the latter part on this top or will cause damage.
8. Please don't make product close to body if it is working or will cause damage.

### GETTING STARTED

1. Plug in and long press the power on button "☺" until indicator light on.
2. There are 2 settings on temperature selection, press setting button "Ⓜ" to select your preferred temperature. Low setting ( I ) is suitable for fragile and soft hair, high setting ( II ) is suitable for hard hair.
3. After temperature setting, the according indicator light will start blinking for heating up and you can start to use the styler when indicator light stop blinking.

### STRAIGHTENING FUNCTION

1. Slide the switcher of straightening and curling to " || " position to make straightening function work.
2. Section hair evenly and comb each section.
3. Place hair section between plates and press together.
4. Slowly guide plates down hair strand. Repeat as necessary until hair strand is smooth.

### CURLING FUNCTION

1. Slide the switcher of straightening and curling to " " position to make curling function

- work. §
2. Section dry hair evenly, and comb each section before winding. Pressing the automatic curl release, place curling iron midway up the hair section, then spread hair evenly between spoon and barrel. Release automatic curl release to hold hair in place. Gently slide curling iron down to hair ends. To avoid crimped ends, make sure they are securely wound under the spoon in the direction of the desired curl. Remember, always place the spoon above the hair strand when making a curl you want rolled under; place the spoon under the hair strand when making a flip style.
3. Wind the hair up as far as you want it curled, being careful not to let the iron touch the scalp. Hold in place for 8-12 seconds depending on the texture and length of your hair. For tighter, bouncier curls, roll less hair. For looser, freeflowing curls, roll more hair.
4. When finished, unwind the hair and press the automatic curl release. To set the curl, do not comb or brush through hair until it cools.

### FOLD HANDLE

If you would like to fold the handle for storage, please push down the "folding lock" to " " and fold the handle at the same time. If you would like to open the handle next time, just fold it will be fine.

