
GET TO KNOW YOUR STRAIGHTENER

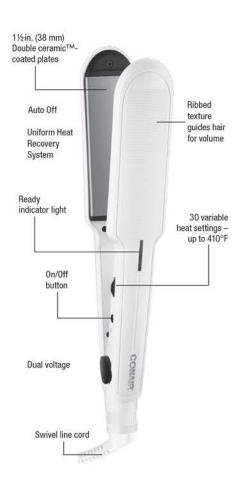

USER MAINTENANCE

Your flat iron is virtually maintenance free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, allow to cool and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to an authorized service representative only. No repairs should be attempted by the consumer.

CAUTION

NEVER allow the power supply cord to be pulled. twisted, or severely bent. Never wrap the cord tightly around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

 
STORAGE

When not in use, your appliance is easy to store. Allow appliance to cool, then store in a safe, dry location, out of reach of children. Do not jerk or strain cord at plug connections.

Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

WARNING: IF YOU THINK THE POWER IS OFF WHEN THE SWITCH IS OFF, YOU'RE WRONG.

KEEP AWAY FROM WATER



Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in. the power is on. So when you are not using your appliances, keep them unplugged.

> ALWAYS UNPLUG SMALL APPLIANCES

LIMITED THREE-YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 36 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre listed below, together with your purchase receipt.

In the absence of a purchase receipt, the warranty period shall be 36 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES. INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF **MERCHANTABILITY AND FITNESS FOR A** PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 36-MONTH **DURATION OF THIS WRITTEN, LIMITED** WARRANTY.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights, which vary from province to province.

SERVICE CENTRE:

100 Conair Parkway, Woodbridge, Ontario, L4H 0L2

www.conaircanada.ca

Consumer Call Centre E-mail: Consumer Canada@Conair.com

Printed in China

IB-17230

Conair Consumer Products ULC

1-855-926-6247 ©2021 Conair Consumer Products ULC

21CN078147

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS **BEFORE USING** KEEP AWAY FROM WATER

DANGER — Any appliance is electrically live even when the switch is off. To reduce the risk of death by electric shock:

- 1. Always unplug appliance immediately after
- 2. Do not use while bathing or in a shower.
- 3. Do not place or store appliance where it can fall or be pulled into a tub or sink
- 4. Do not place in, or drop into water or other liquids. 5. If an appliance falls into water, unplug it immediately. Do not reach into the water.
- **WARNING** To reduce the risk of burns. electrocution, fire, or injury to persons:
- 1. This appliance should never be left unattended when plugged in.
- 2. Do not pull, twist, or wrap line cord around appliance, even during storage.
- 3. This appliance should not be used by, on or near children or individuals with certain
- 4. Use this appliance only for its intended use, as described in this manual. Do not use attachments

not recommended by the manufacturer.

- 5. Never operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.
- 6. Keep the cord away from heated surfaces.
- 7. Never use while sleeping.
- 8. Never drop or insert any object into any open-
- 9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- 10. Unit is hot when in use. Do not let heated surfaces touch eyes or skin.
- 11. Do not place the heated unit directly on any surface while it is hot or plugged in.
- 12. Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.
- 13. Do not use an extension cord with this appli-
- 14. Do not touch hot surfaces of the appliance. Use handles or knobs.
- 15. Before plugging in, read the information about dual voltage contained in the instruction section
- 16. Do not attempt to touch the housing of your appliance near the straightening plates, as it is hot when in use.
- 17. Do not use with a voltage converter.

18. This appliance is not a toy. Keep away

SAVE THESE INSTRUCTIONS **OPERATING**

INSTRUCTIONS

This unit is designed to operate at 125/250 volts AC. Use on Alternating Current (50/60 hertz) only.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

DUAL VOLTAGE

This flat iron will automatically adjust to the proper voltage. Use an adapter plug with correct configuration prior to use in outlet.

NOTE: Do not use this styling appliance on hair extensions.

STRAIGHTENING BASICS

Plug the flat iron cord into any electrical outlet (125/250VAC). Press I/O button. Red light will blink until it reaches desired temperature setting and then becomes solid. Never leave your flat iron on and unattended. However, should you fail to turn the unit off, it will shut itself off automatically within 60 minutes at 60 Hz (72 minutes at 50 Hz).

WARNING: The flat iron's double ceramic™-coated

plates will get very hot within a few seconds and should not be placed in contact with the skin after the flat iron has been turned on.

Start with a hair section that is 2 inches (5 cm) wide and no more than 1/2 inch (1.25 cm) thick. Open the iron and place a hair section between the two hot plates, close to the scalp. Trap hair between the plates by firmly squeezing the handles together. While maintaining the tension, slowly pull the iron down along the hair section toward the end. At the end of hair section, release the pressure on the handle and allow the hair to slide out. Repeat process on additional sections of hair until you achieve the hair style you desire. It may be necessary to repeat process on certain areas, depending on the texture of your hair.

Some experience is necessary when learning to use this flat iron. After using the iron several times, you will learn the ideal way to straighten and style your hair easily.

NOTE: Please refer to the temperature setting guide for heat settings.

STYLING WITH DOUBLE CERAMIC™-COATED PLATES

The easy-glide double ceramic[™] surface is one of the latest technological advances in hair appliances. Hair glides over the ultra-smooth plate surface as you straighten, and styling product residue removes easily after each use. The unique plate surface creates anti-static smoothing action, helping smooth flyaways and frizz for high intensity shine and manageability. Ceramic evenly distributes heat to eliminate hot spots that can damage hair. This advanced new technology leaves

2-IN-1 STRAIGHT OR VOLUME WITH A TOUCH OF CURL



hair with a salon-perfect, silky smooth, shiny fin-

Turn your wrist up or under to create flips, add curl or more body.

STYLING WITH THE NEW EASY-GLIDE FLOATING PLATE

One plate of your new flat iron is designed with a little give, to "float" in the iron. This provides better contact with hair and eliminates gaps to achieve straighter results faster.

ADD VOLUME AND SHAPE WITH NEW RIBBED TEXTURE HOUSING

The finely ribbed texture of the housing is designed to gently guide hair as you turn your iron. Ribs hold hair in place when creating more volume or a touch of curl. It's an easy way to add shape to straight styles.

And that's not all. Conair's professional salon standards of engineering provide you with a Uniform Heat Recovery System to maintain the flat iron at a constant temperature.

A constant surge of power ensures that heat is continuously delivered for optimal styling results, unlike other units, which lose heat during use. It provides consistent styling power so that every strand of hair is set with the same level of heat for uniform results and a perfect finish.

USING INSTANT HEAT, THE 30 VARIABLE TEMPERATURE SETTINGS AND UNIFORM HEAT RECOVERY SYSTEM

DOUBLE

CERAMIC

1½ IN. (38 MM)

FLAT IRON

Have a Ouestion?

Please do not return this

product to the retailer.

Call Us First!

Our customer service and product experts

are ready to answer ALL your questions.

Please call our TOLL-FREE customer

service number at:

1-855-926-6247

or visit us online at

www.conaircanada.ca

Instructions & Styling Guide

For your safety and continued enjoyment of this

product, always read the instruction book

carefully before using.

Instructions & Styling Guide Models CS922NC

. - . . .

The 410°F high heat Uniform Heat Recovery System provides fast, professional salon styling results at home. This flat iron features Conair's Instant Heat technology. It quickly heats up to the temperature you've selected for your hair type and is then ready

Within this Instant Heat technology are 30 temperature settings for every type of hair, from the finest to the curliest and most resistant.

TEMPERATURE SETTING GUIDE

TEMP. CONTROL	HAIR TYPE
Low 1-5	Delicate, thin, easy-to-style hair
Medium 6-10	Average to thick or treated hair
Med-High 11-15	Thick or wavy hair
High 16-20	Hard-to-style hair
Maximum 21-30	Very resistant