


GET TO KNOW YOUR TOURMALINE CERAMIC FLAT IRON

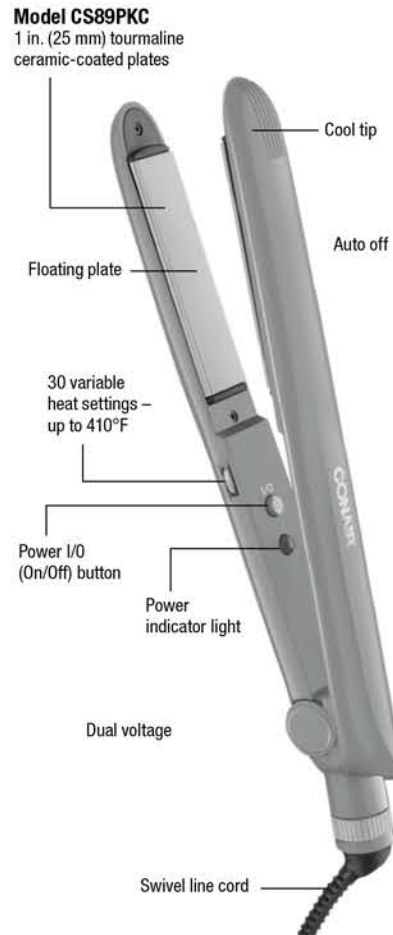

USER MAINTENANCE

Your flat iron is virtually maintenance free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, allow to cool and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to an authorized service representative only. No repairs should be attempted by the consumer.

CAUTION

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your appliance is easy to store. Allow appliance to cool, then store in a safe, dry location, out of reach of children. Do not jerk or strain cord at plug connections. Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

use, as described in this manual. Do not use attachments not recommended by the manufacturer.

5. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.**

6. Keep the cord away from heated surfaces.

7. Never use while sleeping.

8. Never drop or insert any object into any opening or hose.

9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

10. Unit is hot when in use. Do not let heated surfaces touch eyes or skin.

11. **Do not place the heated unit directly on any surface while it is hot or plugged in.**

12. Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.

13. Do not use an extension cord with this appliance.

14. Do not touch hot surfaces of the appliance. Use handles or knobs.

15. Before plugging in, read the information about dual voltage contained in the instruction section of this manual.

16. Do not attempt to touch the housing of your appliance near the straightening plates, as it is hot when in use.

17. Do not use with a voltage converter.

**WARNING:
IF YOU THINK
THE POWER IS OFF
WHEN THE SWITCH
IS OFF,
YOU'RE WRONG.**

KEEP AWAY FROM WATER



Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

**ALWAYS UNPLUG
SMALL APPLIANCES**

18. This appliance is not a toy. Keep away from children.

**SAVE THESE
INSTRUCTIONS
OPERATING
INSTRUCTIONS**

This unit is designed to operate at 125/250 volts AC. Use on Alternating Current (50/60 hertz) only.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

NOTE: Do not use this styling appliance on hair extensions.

DUAL VOLTAGE

This flat iron will automatically adjust to the proper voltage. Use an adapter plug with correct configuration prior to use in outlet.

STRAIGHTENING BASICS

Plug the flat iron cord into any electrical outlet (125/250V). Press I/O button. Red light will blink until it reaches desired temperature setting and then becomes solid. To turn off, press I/O button again until red light goes out. Never leave your flat iron on and unattended. However, should you fail to turn the unit off, it will shut itself off automatically within 60 minutes when on 60 Hz and 72 minutes when on 50 Hz.

LIMITED TWO-YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace, at our option, your appliance free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre listed below, together with your purchase receipt. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24-MONTH DURATION OF THIS WARRANTY.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights which vary from province to province.

SERVICE CENTRE

©2020 CONAIR CONSUMER PRODUCTS ULC
100 Conair Parkway
Woodbridge Ontario, L4H 0L2
For more information on any Conair product call: 1-855-926-6247
Visit our Web site:
www.conaircanada.ca
Consumer Call Centre E-mail:
Consumer_Canada@Conair.com

20CN073523

IB-16832

CONAIR

1 inch (2.5 cm)
straightener



Have a Question?

Please do not return this product to the retailer.

Call Us First!

Our customer service and product experts are ready to answer ALL your questions.

Please call our TOLL-FREE customer service number at: 1-855-926-6247

or visit us online at www.conaircanada.ca

Instruction & Styling Guide

Model CS89PKC

STYLING WITH THE NEW EASY-GLIDE FLOATING TOURMALINE CERAMIC-COATED PLATE

The plate of your new flat iron is designed with a little give, to "float" in your iron. This provides better contact with hair, eliminating gaps, for straighter results. The easy-glide tourmaline ceramic surface is the one of the latest – and best – technological advances in hair appliances. The tourmaline ceramic even heat distribution produces the ultimate in healthy, shiny, silky-looking hair. You'll find that hair glides easily over the surface of the plates as you're straightening, and that it is easier to clean styling products residue, etc. off the plates after each use. The tourmaline ceramic surface also helps smooth down flyaways and frizzies. As you smooth your hair, heat is evenly distributed so that the style you create has a salon-perfect, silky smooth, shiny finish. Hair also glides right through the plates after it's straightened.

And that's not all. Conair's professional salon standards of engineering provide you with a Uniform Heat Recovery System to maintain the flat iron at a constant temperature.

A constant surge of power ensures that heat is continuously delivered for optimal styling results, unlike other units, which lose heat during use. It provides consistent styling power so that every strand of hair is set with the same level of heat for uniform results and a perfect finish.

Tourmaline ceramic technology is a pleasure to work with, makes styling your hair easier and provides professional results.

USING INSTANT HEAT, THE 30 VARIABLE TEMPERATURE SETTINGS AND UNIFORM HEAT RECOVERY SYSTEM

The 410°F high heat uniform heat recovery system provides fast, professional salon styling results at home. This flat iron features Conair's Instant Heat technology. It quickly heats up to the temperature you've selected for your hair type and is then ready to use.

Within this Instant Heat technology there are 30 temperature settings for every type of hair, from the finest to the curliest and most resistant.

TEMPERATURE SETTING GUIDE

TEMP. CONTROL	HAIR TYPE
Low 1–8	Delicate, thin, easy-to-straighten hair
Medium 9–14	Average to thick or treated hair
Med-High 15–20	Thick or wavy hair
High 21–25	Hard-to-straighten hair
Max 26–30	Coarse, hard-to-straighten hair

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

**READ ALL INSTRUCTIONS BEFORE USING
KEEP AWAY FROM WATER**

DANGER – Any appliance is electrically live even when the switch is off. To reduce the risk of death by electric shock:

1. **Always unplug appliance immediately after using.**
2. Do not use while bathing or in a shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into water or other liquids.
5. If an appliance falls into water, unplug it immediately. **Do not reach into the water.**

WARNING – To reduce the risk of burns, electrocution, fire, or injury to persons:

1. **This appliance should never be left unattended when plugged in.**
2. **Do not pull, twist, or wrap line cord around appliance, even during storage.**
3. This appliance should not be used by, on or near children or individuals with certain disabilities.
4. Use this appliance only for its intended