



This message about...

GROUND
FAULT
CIRCUIT
INTERRUPTERS

...can save a life!

IMPORTANT

Never immerse this product in water or any other liquids.

IF YOU MUST USE YOUR HOT AIR STYLER IN THE BATHROOM, INSTALL A GFCI* NOW!

Your local electrician can help you decide which type is best for you – a portable unit that plugs into the electrical outlet or a permanent unit installed by your electrician. The National Electrical Code now requires GFCIs in the bathrooms, garages, and outdoor outlets of all new homes.

WHY DO YOU NEED A GFCI? Electricity and water don't mix. If your hot air styler falls in water while it's plugged in, the electric shock can kill you... **even if the switch is off.** A regular fuse or circuit breaker won't protect you under these circumstances. A GFCI offers you far greater protection.



A GFCI can save your life! Compared to that, the price is small! Don't wait... install one now!

*GFCI is a sensitive device that reacts immediately to a small electric current leak by stopping the electricity flow.

CLEANING & MAINTENANCE

- Unplug the appliance and let cool completely before cleaning it.
- Use a damp cloth to clean carefully. Make sure the appliance is completely dry before using again.
- The rear filter should be cleaned on a regular basis using a soft brush to help prevent buildup and overheating. This will also prolong the motor life.

USER MAINTENANCE

Your hot air styler is virtually maintenance free. No lubrication is needed. For proper operating performance, the hot air styler must be kept clean. When cleaning is needed, unplug the cord, allow to cool and clean dust and lint from air intake openings with a small brush or the brush attachment of a vacuum cleaner. The outer surface of the hot air styler should be wiped clean with a cloth only. **Blocked or clogged air intake vents will cause the hot air styler to overheat.** If overheating occurs, an automatic safety device will shut the hot air styler or the heat off to prevent damage or personal injury. If the unit or the heat turns off, unplug the cord and allow the hot air styler to cool for 10 to 15 minutes before restarting. Make sure the air vents are clean.

CAUTION

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the hot air styler. Damage will occur at the high flex point of entry into the hot air styler, causing it to rupture and short. Inspect the cord frequently for damage. **Stop use immediately if damage is visible or unit stops or operates intermittently.**

If the cord or hot air styler is damaged or does not operate properly, return it for repair to an authorized Conair service representative only. No repairs should be attempted by the consumer.

STORAGE – IMPORTANT

When not in use, your hot air styler should be disconnected, allowed to cool and stored in a safe, dry location, out of reach of children. Do not wrap line cord around hot air styler. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

LIMITED THREE YEAR WARRANTY

Conair will repair or replace, at our option, your appliance free of charge for 36 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre listed below together with your sales slip and \$7.50 for postage and handling. In the absence of a receipt, the warranty period shall be 36 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 36 MONTH DURATION OF THIS WARRANTY.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights which vary from province to province.

SERVICE CENTRE:
CONAIR CONSUMER PRODUCTS ULC
100 Conair Parkway
Woodbridge Ontario, L4H 0L2
©2020 CONAIR CONSUMER PRODUCTS ULC
For more information on any Conair product call:
1-855-926-6247
Visit our Web site: www.conaircanada.ca
Consumer Call Centre E-mail:
Consumer_Canada@Conair.com
19CN035057

IB-16672

The Knot Dr.
FOR **CONAIR®**



Detangling
Hot Air Brush
Wet/Dry
Styler

Have a Question?

Please do not return this product to the retailer.

Call Us First!

Our customer service and product experts are ready to answer ALL your questions. Please call our TOLL-FREE customer service number at: 1-855-926-6247 or visit us online at www.conaircanada.ca

Model BC116C
Instruction Booklet

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER – Any appliance is electrically live even when the switch is off. To reduce the risk of death or injury by electric shock:

1. Always unplug appliance immediately after using.
2. Do not use while bathing or in the shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into water or other liquids.
5. If an appliance falls into water, unplug it immediately. **Do not reach into the water.**

WARNING – To reduce the risk of burns, electrocution, fire, or injury to persons:

1. This appliance should never be left unattended when plugged in.
2. This appliance should not be used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped, damaged, or dropped into water. Return the appliance to a Conair Service Center for examination and repair.**
5. Keep the cord away from heated surfaces. Do not pull, twist, or wrap line cord around appliance, even during storage.
6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
7. Never use while sleeping.
8. Never drop or insert any object into any opening or hose.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Do not use an extension cord to operate hot air styler.
11. Do not direct hot air toward eyes or other heat-sensitive areas.
12. **Attachments may be hot during use. Allow them to cool before handling.**
13. Do not place appliance on any surface while it is operating.
14. While using the appliance, keep your hair out of it. Keep your hair away from the air inlets.
15. Do not use with a voltage converter.
16. This appliance is not a toy. Keep away from children.

SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS

This appliance is intended for household use only. Use on Alternating Current (60 hertz) only. Standard hot air stylers are designed to operate at 110 to 125 volts AC.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

NOTE: Do not use this styling appliance on hair extensions.

TOURMALINE CERAMIC TECHNOLOGY

The hot air styler has tourmaline ceramic heat, eliminating damaging hot spots for beautiful, frizz-free shine.

IONIC TECHNOLOGY

Many aspects of modern living, including air conditioning, contact with man-made fibers and air pollution contribute to a buildup of static electricity in the hair. Even brushing and towel drying the hair, can increase these levels, causing the surface of the cuticle to become rough.

Consequently, hair may have a dull appearance. Also high levels of static charge cause hair to be-

come flyaway and difficult to style.

The ion generator produces a stream of negative ions that act to neutralize the static charge, smoothing the scales on the cuticle for shiny, smooth and manageable hair, so you can achieve your desired style easily.

THE IONIZING FUNCTION

Generates negative ions to:

- neutralize the generally positive charge on flyaway, frizzy hair
- eliminate static electricity
- contribute to shine

NOTE: The unit may produce a clicking sound at times, which is normal for a high output ion generator.

GETTING STARTED

After shampooing your hair, towel-dry and untangle it carefully with a large-toothed comb. Always start untangling your wet hair at the tips, then gradually work your way up. Gentle untangling prevents split ends from forming. You may now finish drying and styling your hair using your hot air styler. Make sure your desired attachment is locked into place. Plug styler into outlet. Slide switch to turn appliance ON and OFF.

FEATURES

- 1000W
- High-shine, ionic conditioning
- 3 heat settings, plus cool shot
- Professional power cord

ROUND BRUSH

176 Flexalite™ bristles. Just the right number, spaced just the right way. Epoxy tips gently massage scalp for painless detangling.

VOLUME PIK

For root lift and volume.

TO SWITCH ATTACHMENTS

Fit the attachments onto the body of the unit by lining up the guides on the two parts and then press the two together until you hear a click. To remove an attachment, press on the unlocking buttons located on the sides of the unit and gently pull the attachment off.

HEAT/SPEED SETTINGS

Low Setting (I): This position combines ideal airflow and temperature setting for shaping finer, damaged or treated hair.

Medium Setting (II): Ideal airflow for medium, normal hair.

High Setting (III): Combines ideal airflow with higher temperature for thick hair.

Cool Shot ():* Using the cool setting at the end sets the style for a long-lasting effect.

TO STYLE HAIR

1. After detangling hair, section damp hair into 4 to 8 equal parts, depending on hair type.
2. Select heat setting based on hair type and desired effect.
3. With brush attachment unit place the appliance into the hair, close to the roots and brush through the section until hair is dry.
4. To add volume at roots attach volume pik and select desired heat setting. Gently insert volume attachment into hair near the hair roots and hold in place for 5–10 seconds. Then apply cool air to lock roots in place. Repeat as needed.
5. Finish look with favorite styling spray.

GET TO KNOW YOUR STYLER



SETTING	HAIR TYPE
LOW (I)	Fragile, Fine/Thin Hair
MEDIUM (II)	Medium/Normal Hair
HIGH (III)	Wavy/Curly/Coarse Thick Hair
COOL SHOT (*)	Sets Style