

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER — Any appliance is electrically live even when the switch is off. To reduce the risk of death by electric shock:

1. **Always unplug appliance immediately after using.**
2. Do not use while bathing or in the shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into water or other liquids.
5. If an appliance falls into water unplug it immediately. **Do not reach into the water.**

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. **This appliance should never be left unattended when plugged in.**
2. **Do not pull, twist, or wrap line cord around appliance.**

3. This appliance should not be used by, on or near children or individuals with certain disabilities.

4. Use this appliance only for its intended use, as described in this manual. Do not use attachments not recommended by the manufacturer.

5. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.**

6. Keep the cord away from heated surfaces.

7. Never use while sleeping.

8. Never drop or insert any object into any opening or hose.

9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

10. Unit is hot when in use. Do not let heated surfaces touch eyes or skin.

11. **Do not place the heated unit directly on any surface while it is hot or plugged in.**

12. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of hair, lint and other debris.

13. Do not use an extension cord with this appliance.


14. Do not touch hot surfaces of the appliance. Use handles or knobs.

15. Do not attempt to touch the housing of your appliance near the straightening plates, as it is hot when in use.

16. Do not use with a voltage converter.

17. This appliance is not a toy, keep away from children.

SAFETY INSTRUCTIONS

1. Do not use the unit if it is damp or if your hands are wet.
2. **WARNING:** Polyethylene bags containing this product or its packaging can be dangerous. To avoid the risk of suffocation, keep these bags out of the reach of babies and children. A polyethylene bag is not a plaything.
3.  Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
4. If the appliance is used in a bathroom, unplug it after use. Leaving the appliance near a source of water may be dangerous, even if the appliance is off. For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your electrician for advice.
5. Do not immerse the appliance in water or any other liquid.
6. Stop using the appliance immediately if the cord is damaged. The power supply cord should not be replaced by the end user. The power supply cord should only be

replaced by the manufacturer's authorized importer (or, in the United States and Canada, by an authorized Service Center).

 
7. Do not leave the appliance unattended while it is plugged in or in use.
8. Do not let the appliance's hot surfaces touch eyes or skin.
9. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.
10. Allow the appliance to cool before storing.
11. After use, do not wind the cord around the appliance as this may damage it. Instead, roll the cord up loosely and let it rest by the side of the appliance.

SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS

This flat iron is intended for household use. Use on Alternating Current (60 hertz) only. This unit is designed to be operated at 125 volts AC.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet

GET TO KNOW YOUR STYLING APPLIANCE

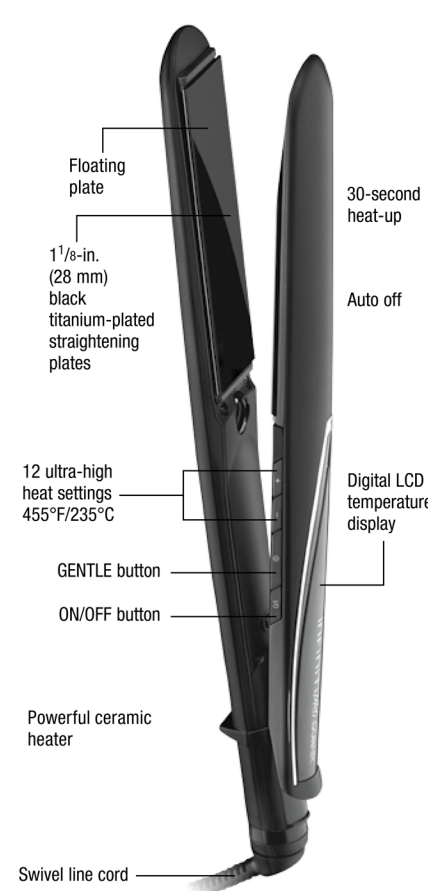

USER MAINTENANCE

Your flat iron is virtually maintenance free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, allow to cool and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to an authorized service representative only. No repairs should be attempted by the consumer.

CAUTION

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your iron is easy to store. Allow appliance to cool, then simply store out of reach of children in a safe, dry location. **Do not jerk or strain cord at plug connections.** Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

Note: Do not use this styling appliance on hair extensions.

TO STRAIGHTEN HAIR

Hair should be clean and completely dry before using the flat iron. Plug the iron into an electrical outlet. Press and hold the I/O button for 1–2 seconds to turn on the unit. Select desired temperature setting by pressing “+” button to increase temperature or “–” button to decrease temperature.

 
Press and hold the I/O button for 1–2 seconds to turn off the unit. Never leave your flat iron on and unattended. **However, should you fail to turn the unit off, it will shut itself off automatically within 60 minutes.**

WARNING: The flat iron's titanium plates will get very hot within a few seconds and should not come into contact with the skin after the flat iron has been turned on.


INSTANT HEAT TECHNOLOGY

The iron's unique 12 ultra-high temperature settings and Instant Heat technology provide styling versatility for all hair types. If you have fine hair, a low temperature will provide the best results. If you have thick, wavy or hard-to-straighten hair, keep the heat setting on high. You can vary the iron's temperature according to your particular need by selecting the desired temperature setting.

For best results, use a light styling product

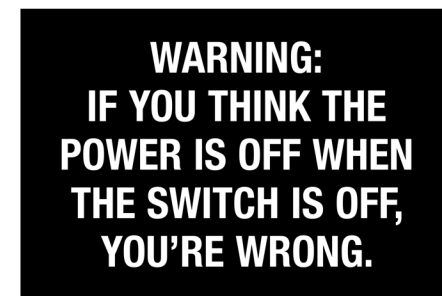

KEEP AWAY FROM WATER

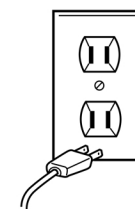 

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

before blow-drying hair. Start with a hair section that is 1½ inches wide and no more than ½ inch thick. Open the iron and place the hair section between the two hot plates, close to the scalp. Trap hair between the plates by firmly squeezing the handles together. While maintaining the tension, slowly pull the unit down along the hair section toward the end. At the end, release the pressure on the handle and allow the hair to slide out. Repeat process on additional sections of hair until you achieve the hairstyle you desire. It may be necessary to repeat process on certain areas, depending on the texture of your hair.

Some experience is necessary when learning to use this flat iron. After using the iron several times, you will learn the ideal way to straighten and style your hair.

STYLING WITH THE TITANIUM PLATES

Your new flat iron features titanium-plated plates for smoother glide, maximum manageability and more professional results.

The titanium technology combines all that is best for your hair. The unique properties create maximum heat conductivity, leaving hair shinier and healthier looking.

CERAMIC HEAT

Your professional flat iron features a fast-performing ceramic heater to deliver high, even heat for superior performance and less damage.

THE IONIZING FUNCTION

generates negative ions to:

- neutralize the generally positive

LIMITED TWO-YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre listed below, together with your purchase receipt and \$7.50 for postage and handling. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24 MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CON-SEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights, which vary from province to province.

SERVICE CENTRE:
CONAIR CONSUMER PRODUCTS ULC
 100 Conair Parkway
 Woodbridge, Ontario, L4H 0L2
 ©2017 CONAIR CONSUMER PRODUCTS ULC
 For more information on any Conair product call:
 1-855-926-6247
 Visit our Web site: www.conaircanada.ca
 Consumer Call Centre E-mail:
Consumer_Canada@Conair.com

17CN026061

IB-14827

charge on flyaway, frizzy hair

- eliminate static electricity
- contribute to shine

NOTE: The unit may produce a clicking sound at times, which is normal for a high output ion generator.

GENTLE MODE (☺)

There are two ways in which to use the straightener: with or without the GENTLE mode.

Select the GENTLE mode to instantly reduce the heat by up to 25°C(45°F) (depending on initial temperature), once in contact with hair. This will help minimize damage when styling.

After turning the flat iron on, it will automatically set to 200°C(390°F). Select a suitable temperature for your hair type by pressing the “+” or “–” buttons. To use the flat iron in GENTLE mode, press the GENTLE button(☺). Once the GENTLE mode has been activated, the GENTLE symbol ☺ will appear within the LCD screen next to the temperature. The temperature will begin to flash, registering that the GENTLE mode has been activated.

If the GENTLE mode is not activated, the flat iron will continue to operate at the temperature selected. To return to normal operation, press the GENTLE button (☺) to cancel the GENTLE mode. The unit will return to the original temperature selected.

SWITCH ACTIVATION CONTROL

IMPORTANT! This flat iron features delayed activation control to give consistent results and ease of use while straightening. Immediately after switching on the flat iron,



Have a Question?

Please do not return this product to the retailer.

Call Us First!

Our customer service and product experts are ready to answer ALL your questions. Please call our TOLL-FREE customer service number at: 1-855-926-6247 or visit us online at www.conaircanada.ca

Instruction Booklet

For your safety and continued enjoyment of this product, always read the instruction booklet carefully before using.

Model CS511C