

# IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

## READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

**DANGER** — Any appliance is electrically live, even when the switch is off. To reduce the risk of death by electric shock:

1. Always unplug appliance immediately after using.
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into water or other liquids.
5. If an appliance falls into water, unplug it immediately. Do not reach into the water.

**WARNING** — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. This appliance should never be left unattended when plugged in.
2. Do not pull, twist, or wrap line cord around appliance.

5. To finish your style and smooth the top of the hair, place the brush on the top of the hair section. Use the other hand to pull the section upward and taut against the heated plate until the bristles penetrate through the hair. Take care to avoid pressing the heated plate against the scalp.

6. Glide the brush down toward the ends of the hair, using the other hand as before to keep the section taut.

7. As the brush nears the ends of the hair, release the hair section from the other hand and brush through to the ends.



3. This appliance should not be used by, on or near children or individuals with certain disabilities.
4. Use this appliance only for its intended use, as described in this manual. Do not use attachments not recommended by the manufacturer.
5. Never operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.
6. Keep the cord away from heated surfaces.
7. Never use while sleeping or drowsy.
8. Never drop or insert any object into any opening or hose.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Unit is hot when in use. Do not let heated surfaces touch eyes or skin.
11. Do not place the heated unit directly on any surface while it is hot or plugged in.
12. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of hair, lint and other debris.
13. Do not use an extension cord with this appliance.
14. Do not touch hot surfaces of the appliance. Use handles or knobs.
15. Do not attempt to touch the housing of your appliance near the heat plate, as it is hot when

- in use.
16. Before plugging in, read the information about dual voltage contained in the Operating Instructions section of this booklet.
17. To avoid tangling, never roll the hair around the smoothing brush.
18. Do not operate with a voltage converter.
19. This appliance is not a toy. Keep away from children.

## SAFETY INSTRUCTIONS

1. Do not use the unit if it is damp or if your hands are wet.
2. WARNING: Polyethylene bags containing this product or its packaging can be dangerous. To avoid the risk of suffocation, keep these bags out of the reach of babies and children. A polyethylene bag is not a plaything.
3. Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
4. If the appliance is used in a bathroom, unplug it after use. Leaving the appliance near a source of water may be dangerous, even if the appliance is off. For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your electrician for advice.
5. Do not immerse the appliance in water or any other liquid.
6. Stop using the appliance immediately if the cord is damaged. The power supply cord should not be replaced by the end user. The power supply cord should only be replaced

- by the manufacturer's authorized importer (or, in the United States and Canada, by an authorized Service Center).
7. Do not leave the appliance unattended while it is plugged in or in use.
8. Do not let the appliance's hot surfaces touch eyes or skin.
9. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.
10. Allow the appliance to cool before storing.
11. After use, do not wind the cord around the appliance as this may damage it. Instead, roll the cord up loosely and let it rest by the side of the appliance.

## SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS

Use on Alternating Current (50/60 hertz) only. This unit is designed to be operated at 125/250V AC.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified

## USER MAINTENANCE


Your straightening brush is virtually maintenance free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the smoothing brush from the power source, let it cool, and wipe exterior with a cloth. If any abnormal condition occurs, unplug the smoothing brush, allow it to cool, and return it for repair to an authorized service center only. No repairs should be attempted by the consumer.

### CAUTION

NEVER allow the power supply cord to be pulled or twisted. Never wrap the cord around the straightening brush. Damage will occur at the high flex point of entry into the straightening brush, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

### STORAGE

When not in use, your appliance should be disconnected, allowed to cool, and stored in a safe, dry location, out of reach of children. Do not jerk or strain cord at plug connections. Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

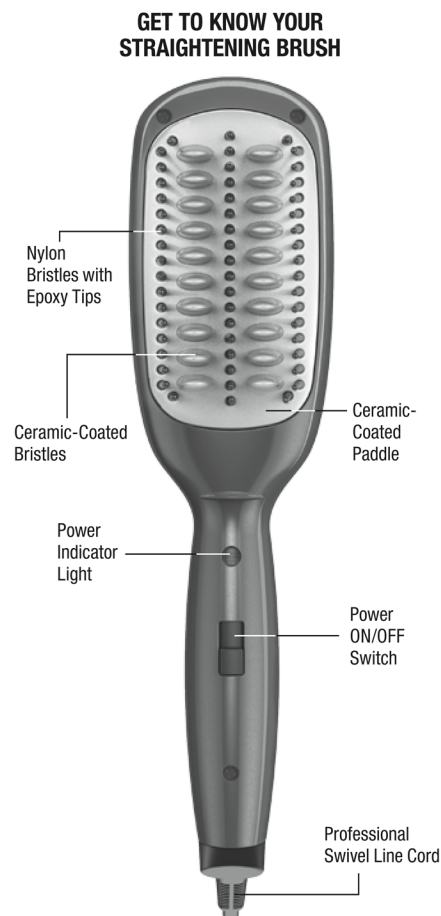

**WARNING:** The straightening brush will get very hot within a few seconds and should not come in contact with skin after it is turned on.

electrician. Do not attempt to defeat this safety feature.

**NOTE: DO NOT USE THIS STYLING APPLIANCE ON HAIR EXTENSIONS.**

### DUAL VOLTAGE

This styling tool will automatically adjust to the proper voltage. Use an adapter plug with correct configuration prior to use in outlet.

### GETTING STARTED

The straightening brush's high heat temperature setting provides unique styling versatility for all hair types.

### STYLING WITH THE CERAMIC-COATED EASY-GLIDE PADDLE

The ceramic-coated surface helps smooth down flyaways and frizz. It evenly distributes heat so that the style you create has a salon-perfect, silky smooth, shiny finish.

The unique combination of heated ceramic-coated and nylon bristles with epoxy tips provides better contact and superior styling for beautifully defined, lasting results. The ceramic-coated bristles retain heat while styling, and the nylon bristles with epoxy tips gently guide hair.

## TO STYLE HAIR

The straightening brush is perfect for everyday styling and touch-ups. Simply slide the switch on and follow these steps to detangle and smooth hair.

1. Ensure hair is fully dry. Use a hairbrush to remove any tangles from the hair and create your part, getting ready for styling.

2. Place the brush underneath the hair section close to the roots with the bristles pointing upward. Use your other hand to pull the hair section taut against the heated plate until the bristles penetrate through the hair.

3. Glide the brush steadily down toward the ends of the hair. Continue to use the other hand to keep the hair taut, sliding it down the section ahead of the brush. Please note: The hand sliding down the hair section must not be too close to the brush to avoid any heat contact.

4. As the brush nears the ends of the hair, release the section with the other hand and turn the heated brush under to give shape at the ends of the hair.



### LIMITED TWO YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre listed below, together with your purchase receipt and \$7.50 for postage and handling. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

**ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24 MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.**

**IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.**

This warranty gives you specific legal rights, and you may also have other rights, which vary from province to province.

©2017 CONAIR CONSUMER PRODUCTS ULC

**SERVICE CENTRE :**  
**CONAIR CONSUMER PRODUCTS ULC**  
 100 Conair Parkway  
 Woodbridge Ontario, L4H 0L2  
 1-855-926-6247  
 www.conaircanada.ca  
 Consumer Call Centre E-mail:  
 Consumer\_Canada@Conair.com

17CN031485

IB-15375

mini PRO<sup>®</sup>  
 STRAIGHTENING BRUSH



For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

### Have a Question?

Please do not return this product to the retailer.  
**Call Us First!**

Our customer service and product experts are ready to answer ALL your questions.

Please call our TOLL-FREE customer service number at: 1-855-926-6247 or visit us online at www.conaircanada.ca

Instructions & Styling Guide  
 Model BC11C Series

**CONAIR**<sup>®</sup>